


Jetski Sprinklers 719-661-6526

Quick Drain Guide

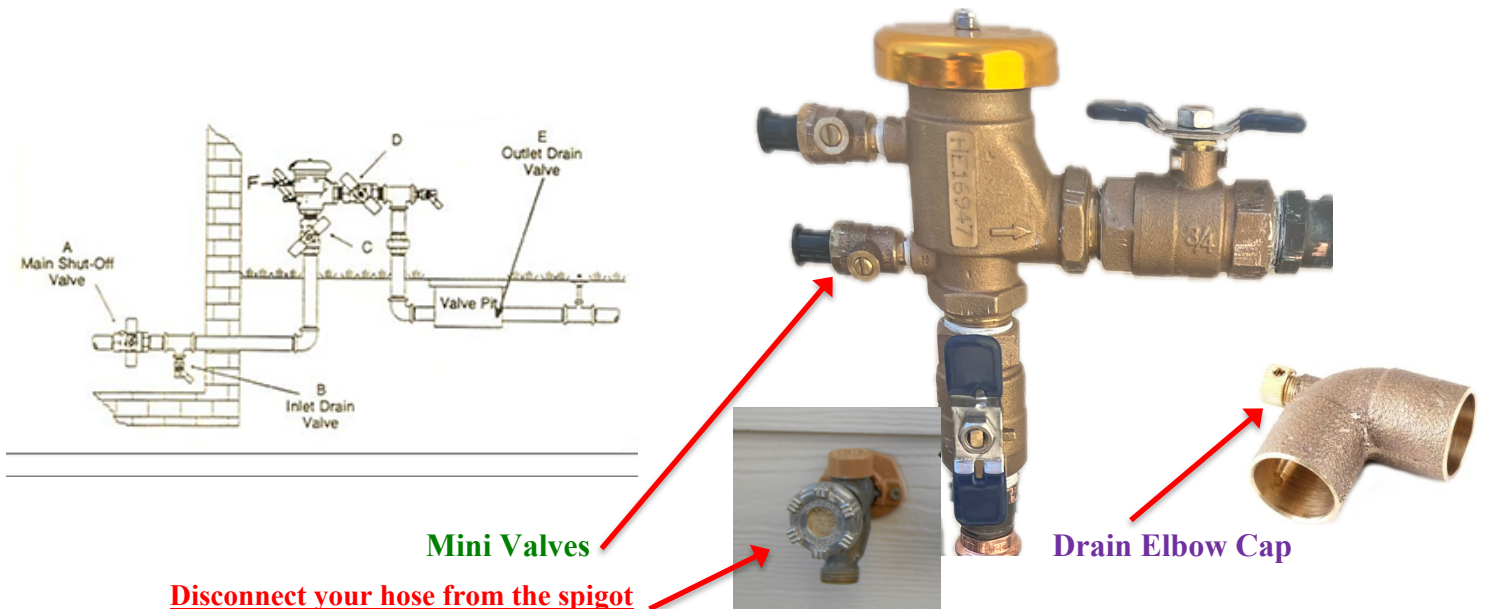


Disconnect your hose from the spigot

1. The first step is to shut off the Main Water Valve (A) inside your house. Usually this is in the furnace/maintenance room but can be in a crawl space, ceiling or closet. **If Jetski Sprinklers worked on your system typically there is a lime green tag with “Sprinkler Shut Off” on it** or if not follow the main water line coming into the house from ground and find the sprinkler line that tees off. Turn the valve handle opposite the pipe.

After that check to make sure you have running water in the house from a sink or shower. If you do then you turned off the correct valve.

2. Second, go to your valve box outside and open the Drain Valve (E) at the end of the line/pipe. Not all valve boxes have this, but if you do it will have a handle. If you don't have a drain skip to step 3.

3. Next with a flat head screwdriver open the two mini valves (F). **Open Mini Valves**

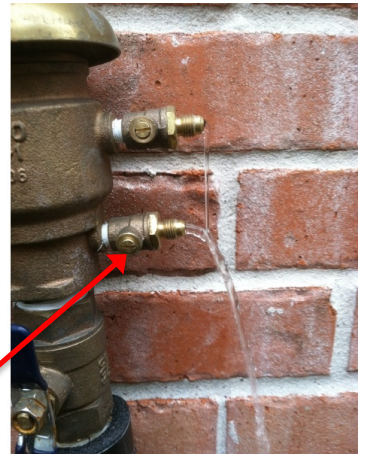

4. Sometimes there is a **Drain Cap** screwed on the copper elbow coming out of the house. Twist that off to drain as well. Tape the cap to the pipe/backflow so you don't lose it. **If you can't find the drain cap it may be taped on the pipe close to the elbow or it may have fallen off to the ground below. Make sure the black rubber gasket is inside the drain cap before you put back on the elbow.**

5. Lastly, return inside, place a small bucket under the Drain Valve (B) and proceed to open it, draining any remaining water into the bucket. The drain valve can be a lever or a **Cap** that you unscrew. You may not have a drain.

To turn the Sprinkler System back on, reverse the steps. (Refer to pictures for example)

1. Starting outside, close the Outlet Drain Valve (E) and the two mini valves (F).
2. Proceed inside and close the Inlet Drain Valve (B).
3. Now you can turn on the Main Water Valve inside.